



CL920 Tablet PC Features • Fonctions • Funktionen • Características • Recursos



- 1 Speaker
- 2 Web camera
- 3 Web camera light
- 4 Microphones
- 5 Volume buttons
- 6 Touchscreen display
- 7 Windows button
- 8 Ambient light sensor
- 9 Battery charge indicator lights
- 10 Documentation camera
- 11 Dock connector
- 12 Pen storage drawer
- 13 Pen release button
- 14 Pen tether attach point
- 15 Power button
- 16 Fan vent
- 17 Security button
- 18 Battery gauge button
- 19 SD HC card slot
- 20 SIM card slot
- 21 Micro HDMI port
- 22 Audio in/out jack
- 23 USB port
- 24 Power adapter port

- 1 Haut-parleur
- 2 Webcam
- 3 Flash de l'appareil photo de webcam
- 4 Microphones
- 5 Boutons de volume
- 6 Écran tactile
- 7 Bouton Windows
- 8 Capteur de lumière ambiante
- 9 Voyants de charge de la batterie
- 10 Appareil photo de documentation
- 11 Connecteur d'ancrage
- 12 Étui de rangement du stylet
- 13 Bouton de libération du stylet
- 14 Point d'attache du lien du stylet
- 15 Bouton d'alimentation
- 16 Fente du ventilateur
- 17 Bouton de sécurité Windows
- 18 Bouton de jauge de la batterie
- 19 Fente pour carte SD HC
- 20 Fente pour carte SIM
- 21 Port Micro HDMI
- 22 Prise jack d'entrée/sortie audio
- 23 Port USB
- 24 Adaptateur secteur

- 1 Lautsprecher
- 2 Webkamera
- 3 Webkamera-skameralente
- 4 Mikrofone
- 5 Lautstärketasten
- 6 Touchscreen-Anzeige
- 7 Windows-Starttaste
- 8 Umgebungslichtsensor
- 9 Akkudladungsstatus-LEDs
- 10 Dokumentationskamera
- 11 Dock-Anschluss
- 12 Stift-Aufbewahrungsfach
- 13 Freigabeknopf für die Stifthaltevorrichtung
- 14 Befestigung der Stifthaltevorrichtung
- 15 Netzschalter
- 16 Lüftung
- 17 Taste "Windows-Sicherheit"
- 18 Akkuanzeige-Taste
- 19 SD HC-Kartensteckplatz
- 20 Steckplatz für SIM-Karte
- 21 Micro HDMI-Anschluss
- 22 Audio In/Out-Buchse
- 23 USB-Anschluss
- 24 Netzadapter

- 1 Altavoz
- 2 Cámara Web
- 3 Luz de cámara de web
- 4 Micrófonos
- 5 Botones de volumen
- 6 Pantalla táctil
- 7 Botón de Windows
- 8 Sensor de luz ambiental
- 9 Luces del indicador de carga de la batería
- 10 Cámara de documentación
- 11 Conector de base
- 12 Compartimento de almacenamiento del lápiz
- 13 Botón de extracción del lápiz
- 14 Punto de unión del cordón del lápiz
- 15 Botón de encendido
- 16 Orificio de ventilación
- 17 Botón de seguridad de Windows
- 18 Botón de indicador de batería
- 19 Ranura para tarjetas SD HC
- 20 Ranura para tarjetas SIM
- 21 Puerto micro HDMI
- 22 Conector de entrada y salida de audio
- 23 Puerto USB
- 24 Adaptador de alimentación

- 1 Alto-falante
- 2 Web camera
- 3 Luz da câmara de web
- 4 Alto-falante
- 5 Botões de volume
- 6 Tela sensível ao toque
- 7 Botão do Windows
- 8 Sensor de luz ambiente
- 9 Luzes indicadoras de carga da bateria
- 10 Câmera de documentação
- 11 Conector Dock
- 12 Compartimento de armazenamento da caneta
- 13 Botão de liberação da caneta
- 14 Ponto de fixação da correia da caneta
- 15 Botão de energia
- 16 Saída da ventoinha
- 17 Botão de segurança do Windows
- 18 Botão do indicador de bateria
- 19 Slot do cartão SD HC
- 20 Slot do cartão SIM
- 21 Porta micro HDMI
- 22 Porta de entrada/saída de áudio
- 23 Porta USB
- 24 Adaptador de energia

User documentation: <http://www.motioncomputing.com/us/support/userdocs>

Documentation utilisateur : <http://www.motioncomputing.com/fr/support/userdocs>

Benutzerdokumentation: <http://www.motioncomputing.com/de/support/userdocs>

Documentación del usuario: <http://www.motioncomputing.com/es/support/userdocs>

Documentação do usuário: <http://www.motioncomputing.com/pt/support/userdocs>



Getting Started with the Motion® CL920 Tablet PC

Power on and off

Press the power button at the top left side of the CL920 Tablet PC.

You can shut down your tablet from Windows®. Swipe from the right side of the screen, tap **Settings**, tap **Power**, then tap **Shut down**. If Windows doesn't respond, force the tablet to shut down by pressing the power button for about five seconds.

Sleep

Place your CL920 in Sleep mode when you go away for a short period of time to conserve battery power. When you return, the Tablet PC quickly resumes activity and your desktop is the same as you left it.

To put the Tablet PC in Sleep mode, press and release the power button. To wake up the tablet from Sleep mode, press the power button again.


NOTE The power button blinks when the tablet is in Sleep mode.

Locking and unlocking

To lock and unlock your CL920, press the Security button on the left side of the Tablet PC.

Using the pen

An important difference between traditional PCs and Tablet PCs is that you frequently use a digitizer pen instead of a mouse and keyboard. The CL920 pen has a pressure-sensitive tip and a function button. Pressing the function button is equivalent to right-clicking a mouse.

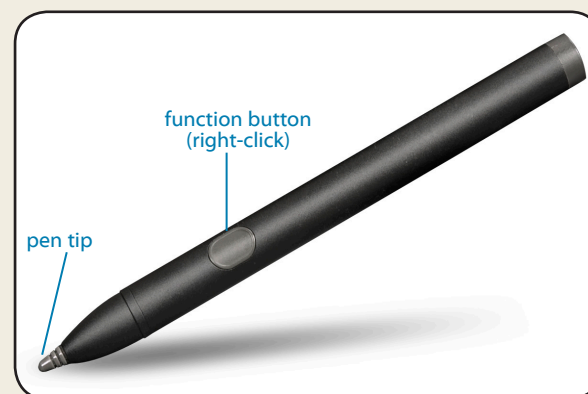

Using touch

Your CL920 is equipped with 10-finger touch, which means you can use your fingers to select items and open files, zoom in and out, scroll through browser windows and documents, and more.

Touch works like a mouse. Tap to select an item and double-tap to open it.

TIP To open a right-click menu using touch, press your finger on the display until a square appears, then lift your finger and the shortcut menu appears.

If you find that the touchscreen doesn't respond as you expect, or if the tablet starts to respond to unintentional touch input, you can fine-tune touch by resetting the touch system to its optimal state. To start the application, tap the Motion Tablet Center tile, then tap **Tablet**, and then tap **Touch Settings**.

Checking battery power

You can check the remaining battery power in your CL920 by:


- From the Windows 8.1 Start Screen, swipe from the right side of the screen and the battery power indicator appears on the screen.
- OR**
- From the Windows Notification area, tap the power indicator, which changes appearance depending on whether the Tablet PC is plugged in or running on battery.
 - If the Tablet PC is plugged in, tap the plug icon.
 - If it is on battery power, tap the battery icon.

The five lights on the left front of the Tablet PC also indicate the battery's current level of charge—from one green light (≤ 20% charged) to five green lights (81%-100% charged). Press the battery gauge button on the left side of the Tablet PC to view the remaining charge level.

When the tablet is plugged in, the battery gauge button lights up.

- Green indicates that the battery is fully charged.
- Amber indicates that the battery is charging.

battery gauge button
battery charge indicator lights

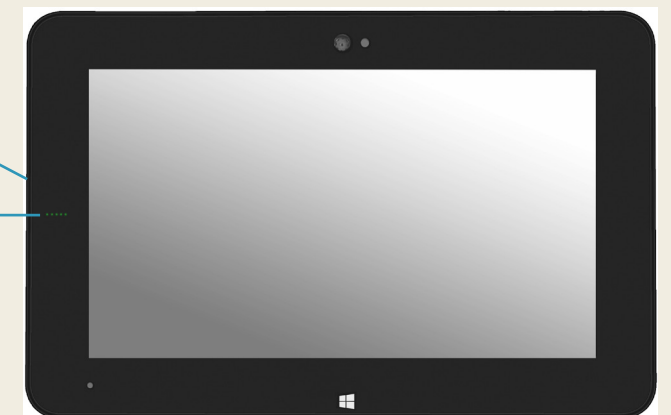

Battery tips

- Use AC power when available. When the CL920 is plugged in, the battery charges while in use.
- Put your Tablet PC in Sleep mode when you're not using it.
- Stop unnecessary background applications and processes.
- When not in use, disable wireless adapters using Motion Tablet Center's **Power** category.
- Set the brightness of the display to automatically dim after a selected number of minutes of inactivity using Motion Tablet Center's **Power** category. Tap **Power**, tap **Advanced**, then tap **Choose when to turn off the display**.
- When using mobile broadband, reduce how often the CL920 updates email and other Internet applications to once every half hour or longer.
- Disable mobile broadband when you know a signal is unavailable.
- Condition your battery once a month. To condition it, run the Tablet PC on battery power until the battery's charge level drops below 20%.

Enter text with the input panel or on-screen keyboard

You can use different methods to enter text with your CL920 to fit your needs. You can use an on-screen touch keyboard or the handwriting panel.


To open the on-screen keyboard:

- Tap the keyboard icon  in the Windows notification area.

OR

- Tap in a text field, such as the URL field in a web browser.

The default on-screen keyboard will appear at the bottom of the screen.

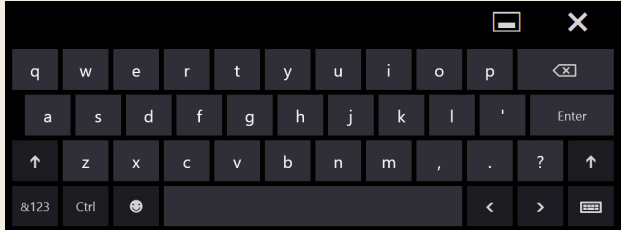


To open the handwriting panel:

- In the on-screen keyboard, press and hold the keyboard icon in the lower right-hand corner of the keyboard.

OR

- From the panel of icons that pops up, tap the handwriting panel icon .


The handwriting panel will appear at the bottom of the screen.

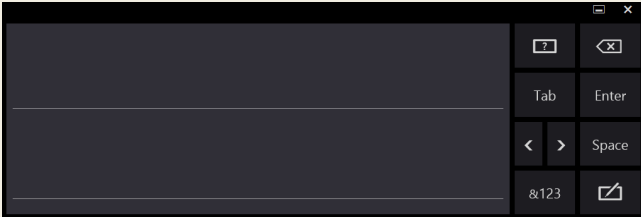

Use your digitizer pen to begin writing in the handwriting panel. Your handwriting will then be converted to text.

Tip The more you write, the more accurately Windows detects your handwriting style.

In addition to the default on-screen keyboard, Windows provides other keyboard layouts for entering text. You can use an expanded keyboard, which provides additional keys or a keyboard that includes a numbers keypad.

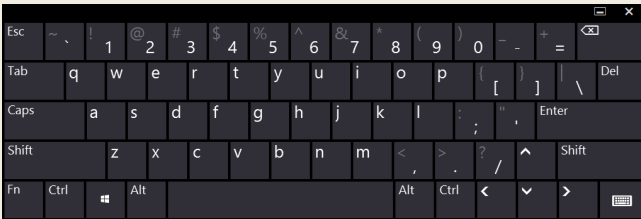

Expanded keyboard

To close the on-screen keyboard or handwriting panel, tap the close icon  in the upper right-hand corner. To minimize the on-screen keyboard or handwriting panel, tap the minimize icon  in the upper right-hand corner.

Set up wireless

The CL920 includes built-in Wi-Fi® and Bluetooth®. Your Tablet PC may also be equipped with mobile broadband. To set up available wireless networks, follow these steps:

Step 1. Set up Wi-Fi

1. Enable Wi-Fi:
 - a. Swipe from the right side of the screen and tap **Settings**.
 - b. From the **Settings** menu, tap the wireless network icon .
 - c. Slide the Wi-Fi On/Off slider to **On**.
2. Select a wireless network from the list of available networks.
3. Follow the on-screen instructions.

Step 2. Set up Bluetooth

1. Enable Bluetooth:
 - a. Swipe from the right side of the screen and tap **Settings**.
 - b. From the **Settings** menu, tap **Change PC Settings**.
 - c. Under **PC and Devices**, tap **Bluetooth**.
 - d. Slide the Bluetooth On/Off slider to **On** and the Tablet PC will begin to search for Bluetooth devices.
2. To add a Bluetooth device:
 - a. Ensure that the Bluetooth device is discoverable according to the manufacturer's instructions. (When a Bluetooth device is discoverable, it's visible to other Bluetooth devices within range.)
 - b. Select the desired Bluetooth device from the list of devices.
 - c. Follow the on-screen instructions.

Step 3. Set up Mobile Broadband with GPS (optional)

If you purchased your CL920 with the optional mobile broadband module, you can connect to high-speed cellular networks worldwide. With the mobile broadband module and a data plan from one of several cellular network providers, you have full Internet access.

- NOTE** Before you can connect to a mobile broadband network, you must have an active account with a cellular network provider and obtain a SIM card for mobile broadband access.
1. With the Tablet PC powered off, insert the SIM card and then power the tablet on.
 2. Enable mobile broadband:
 - a. Swipe from the right side of the screen and tap **Settings**.
 - b. From the **Settings** menu, tap the wireless network icon .
 - c. Slide the mobile broadband On/Off slider to **On**.
 3. If the desired network service provider isn't displayed, tap **(find more)** under Mobile Broadband.
 - a. Select location and tap **OK**.
 4. Select the desired network service provider.
 5. Follow the on-screen instructions.
- NOTE** If you purchased your CL920 with the optional Mobile broadband with GPS module or the optional discrete GPS module, your tablet has GPS capabilities. You can use GPS with your preferred mapping application to find your current and destination locations. Please refer to the *User's Guide* for additional information.

Motion Tablet Center

Motion Tablet Center provides a central location for accessing and configuring the most commonly used Windows 8.1 settings.

To open Motion Tablet Center:

- Tap the Motion Tablet Center icon in the Windows taskbar. 

OR

- From the Windows 8.1 Start Screen, tap the MotionTablet Center tile. 

The following table lists some of the tasks you can perform using Motion Tablet Center.

Category	Task
Tablet	Adjust Pen and Touch Settings
	Configure Tablet PC Settings
	Adjust Touch Settings
	Configure Wireless Settings
Power	Turn devices on or off
	Change what the power button does when pressed when plugged in or on battery: Sleep, Hibernate, or shut down
	Access advanced Power Management settings
Sensors	Calibrate the CL920's internal compass and access Location Services

Motion Tablet Center

Tablet

Power

Sensors



Tablet

Tablet PC Settings

Pen and Touch

Wireless Settings

Tablet PC Settings

Touch Settings

System Information

System Model: Motion Computing CL920

System Serial Number: 00434379

Operating System: Microsoft Windows 8.1

Processor: Intel® Pentium® CPU N3530 @2.16GHz

BIOS: X.10

Installed Memory: 4.0 GB

Computer Name: DVT207

Tablet Center Version: 1.2.4.4


Advanced

Using the documentation camera

Your CL920 is equipped with an integrated 5MP auto-focus camera. You can use the camera to take pictures and save them on the Tablet PC. The camera lens is on the back of the unit.

To take a photograph:

1. Tap the camera icon  on the Windows taskbar to activate Motion SnapWorks.
2. Hold the camera steady and point the lens at the object.
3. Press the camera icon  to take the picture.

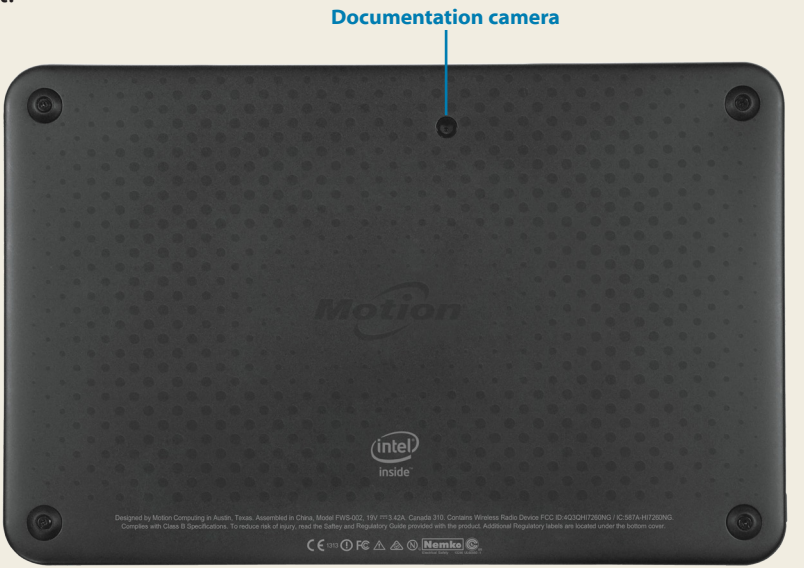


Using the web camera

Your CL920 has a 1.3MP web camera that supports color images and streaming video. The web camera is located on the front of the Tablet PC in the top center area.

If you'd like to use Skype™ with your web camera, you can access it by tapping the Skype tile on the Windows 8.1 Start screen. 

Follow the on-screen instructions for using Skype or the web camera software of your choice.

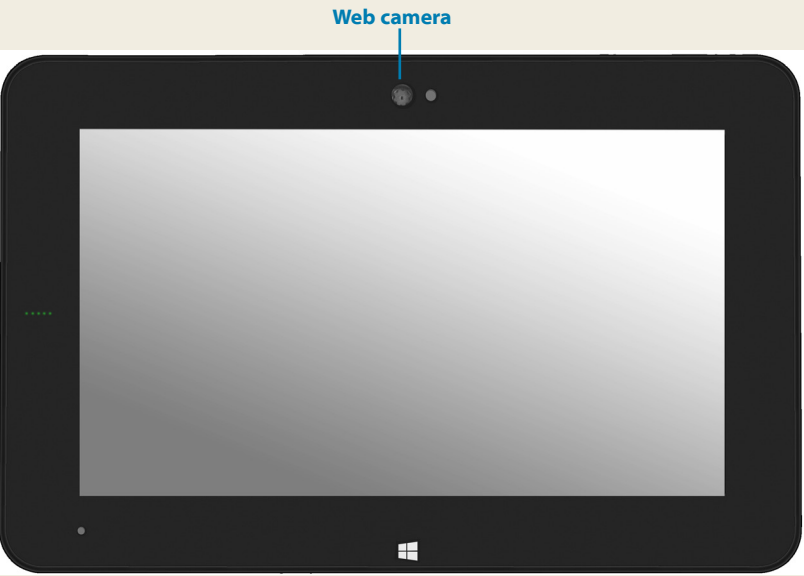

Tips

Make the most of your CL920 by following these tips.

Pen and Touch tips

- You can change from right- to left-handed use. From Motion Tablet Center, tap **Tablet PC Settings**, tap the **Other** tab, then tap **Left-handed**.
- You can open items with one tap (instead of two) and select an item by pointing to it. From the Control Panel, tap **Folder Options**, then tap **Single-click to open an item (point to select)**.

General tips

- Use only the CL920 digitizer pen or your finger on the display. The Tablet PC doesn't respond to any other type of pen or stylus.
- When attaching the pen tether, slip one end of the tether through the hole at the end of the pen and pull the pen through the loop until it's tight. Then slip the other end of the tether through the attach point and pull the pen through the loop until it's tight.
- Store the pen in the pen storage bay when not in use. To store the pen, press the pen release button and insert it into the pen storage bay, tip down. To remove the pen, press the pen release button and pull the pen upward and out from the storage bay.
- Clean fingerprints and smudges from the display surface by wiping it with the display cloth provided.
- You can find the serial number of your CL920 in Motion Tablet Center on the **Tablet** screen.

Caution • Attention • Achtung • Precaución • Precaución

- Read the Safety and Regulatory Guide before starting the tablet.
- Veuillez lire le *Guide des conseils de sécurité et réglementations* avant de démarrer la tablette.
- Lesen Sie vor Inbetriebnahme des Tablet PC das *Sicherheits- und Vorschriftshandbuch*.
- Lea la *Guía de seguridad y normativa* antes de empezar a utilizar el tablet.
- Leia o *Guia Regulatório e de Segurança* antes de ligar o tablet.

Learn more

To get more detailed information on your Tablet PC, go to the *CL920 User's Guide*, which is available here:

<http://www.motioncomputing.com/us/support/userdocs>.

In addition to our documentation, you can get the following information from our website:

- [Motion Support](#)
- [Motion Knowledge Base](#)
- [Free online training videos](#)
- [CL920 accessories](#)
- [Software for the CL920 Tablet PC](#)

For more accessories, go to <http://www.motioncomputing.com/us/products/rugged-tablets/CL920#accessories>

Pour davantage d'accessoires, rendez-vous sur http://www.motioncomputing.com/fr/products/rugged-tablets/CL920#prod_acc
Weitere Informationen zum Zubehör erhalten Sie hier http://www.motioncomputing.com/de/products/rugged-tablets/CL920#prod_acc
Para obtener más información sobre accesorios, visite http://www.motioncomputing.com/es/products/rugged-tablets/CL920#prod_acc
Para obter mais informações sobre acessórios, acesse http://www.motioncomputing.com/pt/products/rugged-tablets/CL920#prod_acc

Copyright © 2014 Motion Computing, Inc. All rights reserved. Motion Computing and Motion are registered trademarks of Motion Computing, Inc. in the United States and other countries. All other trademarks are properties of their respective owners. Microsoft, Windows, and Windows Journal are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

PN 024-02-0490-A01